



# Angel Ventlock<sup>®</sup> Face Fixed

Window Opening Control Device **Safety**

Notice: Important safety information,  
Leave this information for the building occupant.

# Safety Guide

Properly maintain opening control device and verify correct window opening control device operation on a monthly basis.

Window opening control device should automatically re-engage when closing bottom sash.

After activation of the window opening control device check for openability.

Clear opening must be less than 4 inches.

Teach household members six years old and older how to operate the release mechanism in case of an emergency.

# Warning

To disengage window opening control device

**01**



Disengage window opening control device

**02**



Raise bottom sash


**03**



Lower bottom sash. Opening control device resets

To manually re-engage window opening control device

**01**

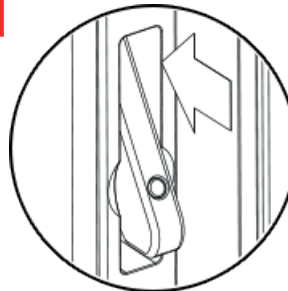

Push top to re-engage window opening control device

# Important **Safety** Information

## Possible Fall Hazard

- Follow manufacturer's assembly and installation instructions carefully. Failure to do so may result in accidental window falls.
- Window opening control device is designed to protect against accidental window falls by children five years and younger.
- Window opening control device is not a substitute for careful supervision of all young children.
- Keep window opening control device engaged unless needed for use in an emergency.

## Young Children may fall through an open window if all instructions are not followed:

- Use recommended materials and techniques.
- Make sure the window opening control device is securely attached to the window sash.
- Make sure that the window is in good condition.

## No window rescue above 75 feet (6th floor)

- Fire rescue ladder may not reach beyond 75 feet (6th floor)
- Do not rely on being rescued from windows above 75 feet (6th floor). Follow building fire escape plan.

## Blocks escape in fire and emergency unless released

- Follow instructions on reverse side to properly operate the window opening control device to open window.
- Never apply padlock or devices that require a key or tool to unlock them to the window opening control device.

