

Angel Ventlock Side Fixed

Window Opening Control Device Instructions (UK Variant)

 
Instructions

 
Parts Included:

2x Side Fixed Window
Opening Control Devices
4x Screws
2x Buffers

Tools Needed:

Safety Glasses
Phillips Head Screwdriver
Drill / Driver
1/16" Drill Bit
Pencil
Tape Measure







Buffer




Warning

  Window opening control device must be installed correctly and engaged to protect against accidental falls. Failure to do so may result in falls / injury. Window must be unlocked and opening control device disengaged to allow for emergency exit.

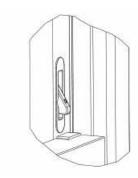





Press dot to disengage

This package contains window opening control device parts for hung windows. These devices must be installed following the enclosed instructions, and be engaged to help protect against accidental falls from windows. Follow manufacturers' instructions for hand or power tools. Always wear safety glasses. Failure to do so may result in injury and / or product damage.


Use caution when working at elevated heights and around unit openings. Follow manufacturers' instructions for ladder and / or scaffolding. Failure to do so may result in injury or death.

This window opening control device was designed to protect against accidental falls by children 5 years old or younger. This window opening control device is not a substitute for supervision of young children. Tested to ASTFM 2090-17*

Step 01

Mark Position

Close and lock bottom sash. Measure 4" (100mm) up from top of bottom sash and mark window frame. Opening control device may be fitted onto the sash stile or rebated.

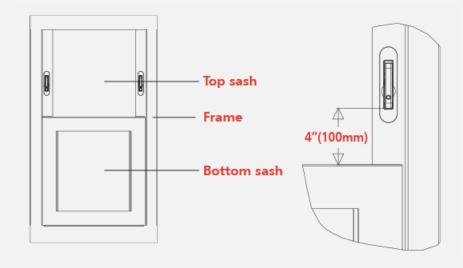


Position opening control device on sash as shown and align the bottom of the restrictor arm on the pencil mark.

Step 02

Fix Window Opening Control Device

Fixing limiter to sash frame.

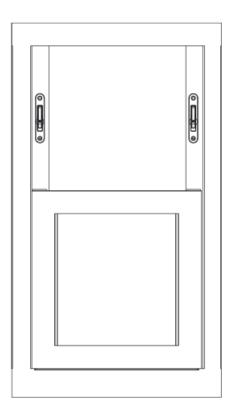


Timber Frames

Mark hole centres Install limiter using screws provided

Step 03

Operation

Disengage opening control devices on each side. Unlock and raise sash.

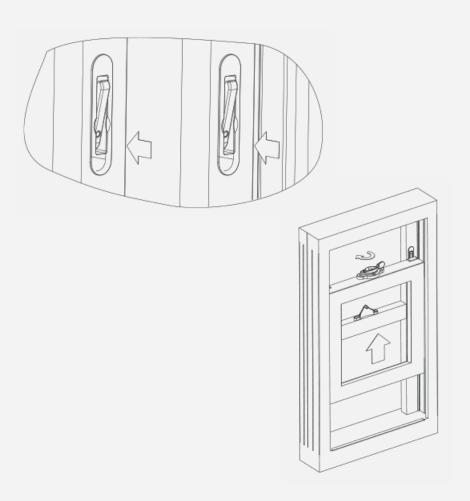


Step 04

Fit Strikeplates

Remove strikeplate and position directly under the opening control device arm as shown below. Screw fix in place so that the Angel device fully engages with the strikeplate.

The strikeplate must be positioned to prevent the sash passing the device. Test the device functionality for both deadstop and reset after fitting.

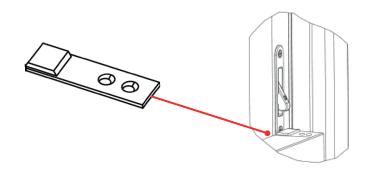

Warning

Strike plates MUST be fitted to ensure the Angel device bridges the gap between top and bottom meeting rails in all window operating circumstances. Omitting to fit strikeplates may lead to injury or risk of death.

Strikeplates are small parts and could pose a choking hazard to young children. Please inspect the device frequently to ensure they are fitted.

Step 05

Verify Installation

Verify correct opening control device operation. Clear opening cannot exceed 4 inches.



1. Disengage opening control devices on each side



3. Lower bottom sash, opening control device resets



2. Raise bottom sash



Clear opening cannot exceed 4 inches

Important

This package contains window opening control device parts for double hung windows. These devices must be installed following the enclosed instructions, and be engaged to help protect against accidental falls from windows. Failure to do so may result in fall / injury. This window opening control device is not a substitute for supervision of young children.

This window opening control device was tested to and complies with the requirements of ASTM F2090, versions 2008, 2010, 2013, and 2017.